Station 252 manual

TIPTOP audio®

VERSION 1.1

WARNING!!

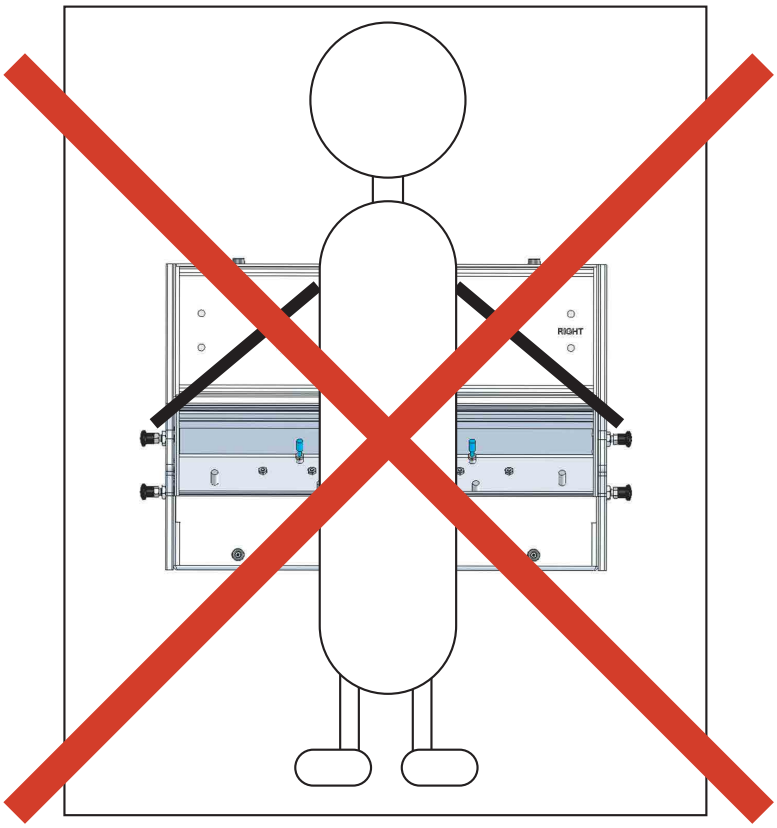

Do NOT pull both locking pins

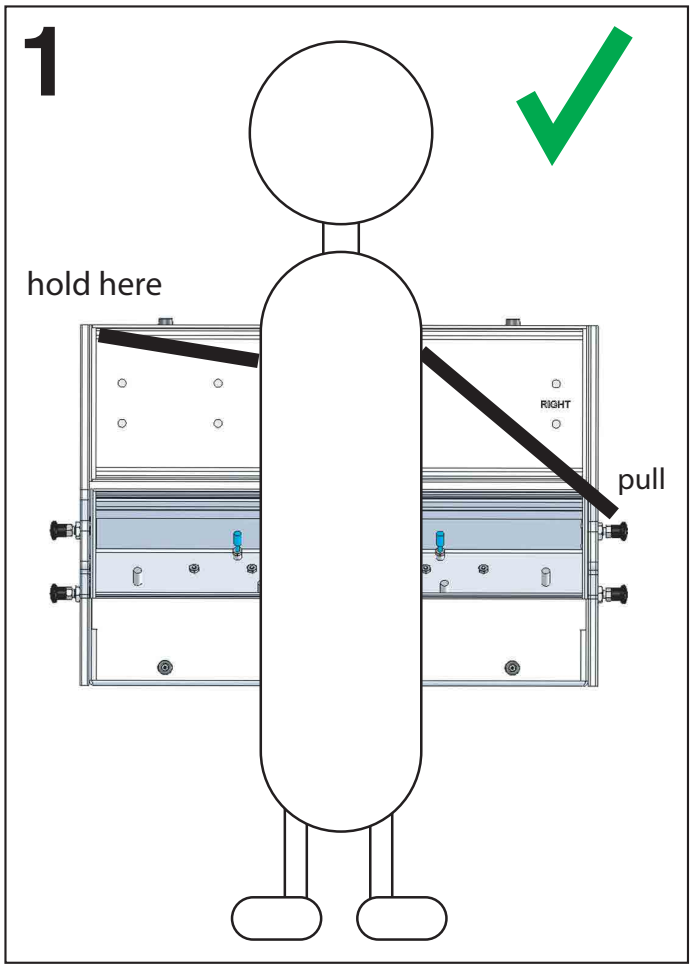

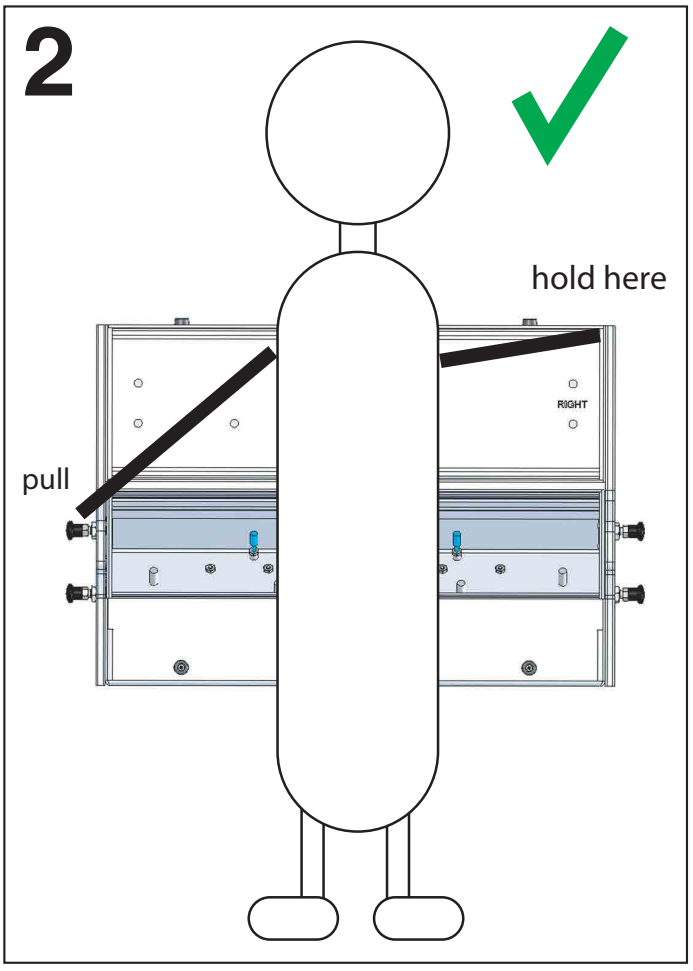

Station 252 User Manual

Introduction

Welcome and thank you for choosing the **Tiptop Audio Station 252**!

This case is not a toy. Please exercise caution as there are moving metal parts that may cause harm if used without proper care. Supervision is advised around young children.

Your **Station 252** was hand assembled with the utmost care and assurance of mechanical precision. Each part was machined to its exact dimensions and size, so it is good to note that parts -- notably the holes for the locking-pins and the kickstand hinge -- may be a little stiff at first; however with regular use, over time your case will become smoother to operate.

Station 252 User Manual

Play Mode

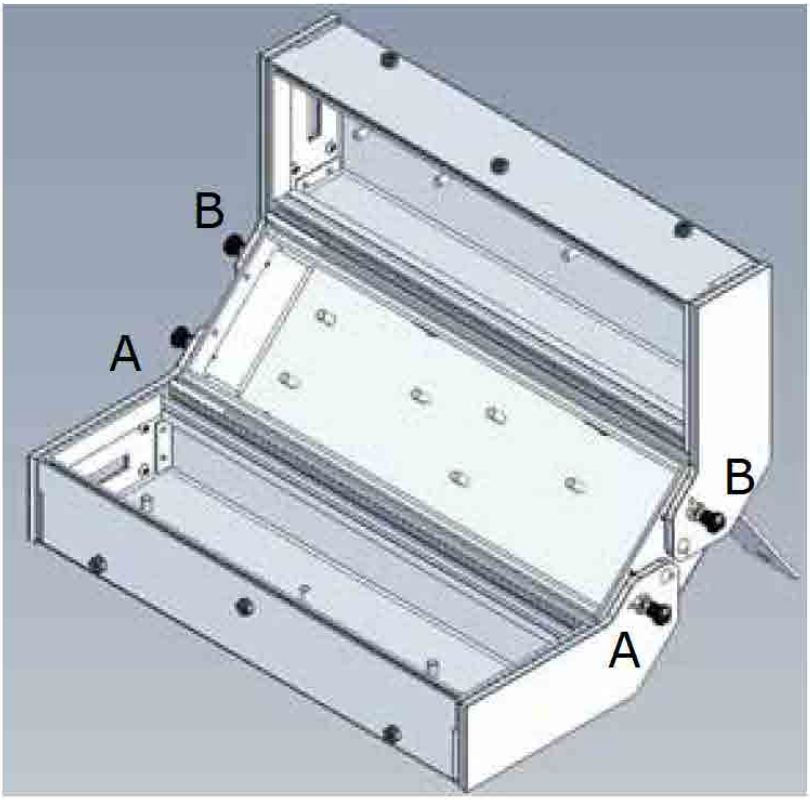

A: Bottom Locking-pins
B: Top Locking-pins
1: Magnetic Kickstand
2: 2.5mm Power Socket
3: Power Switch
4: Non-skid Strips
5: Handle

Stationary Mode

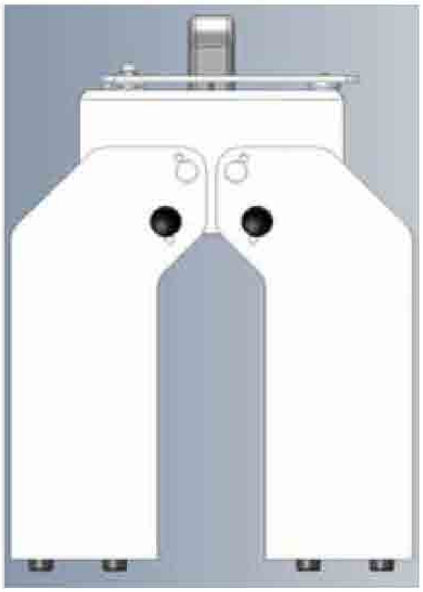

Top View (Right-Side Up)

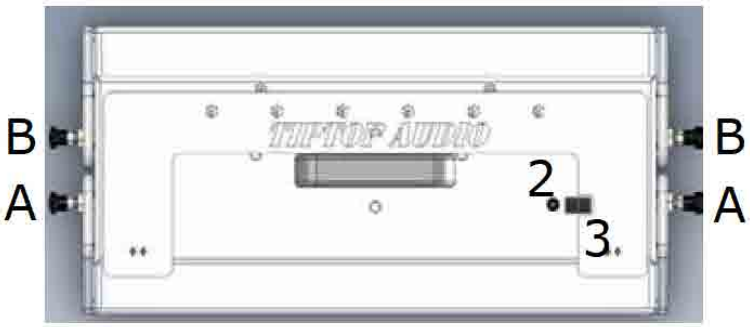

Side View

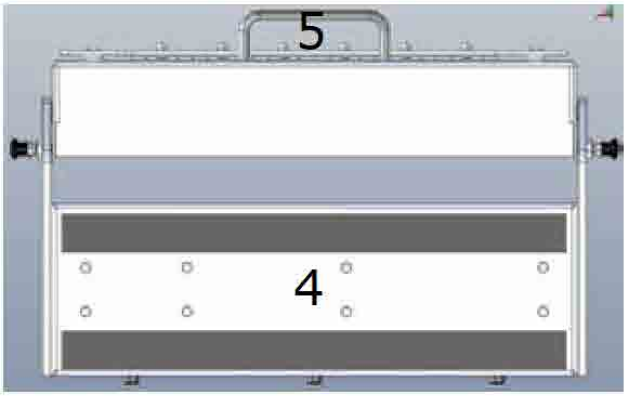

TIPTOPaudio®

Station 252 User Manual

Before you begin....

- Before pulling the locking-pins, make sure you always keep a hand on the top row of the case to prevent it from falling over.
- While operating the case, please exercise patience.
- When the case is closed, it is recommended that your case stay in its *Stationary Mode* with the handle perpendicular to the ground as shown in the previous page. This will minimize pressure caused by the case's weight on the locking-pin holes.

Opening the Case

- When you're ready to use the case, place the side with non-skid strips on the surface.
- Pull out the metal kickstand.
- While holding the top row with one hand, use the other to open each bottom locking-pin (**A**) as shown in the picture, one at a time. Make sure you always keep a hand on the top row of the case to prevent it from falling over.

↳ **Tip:** To keep the locking-pins fastened in its open position, pull them out all the way then twist them one quarter of a turn. Twist them back to close.

Locking-Pin Positions

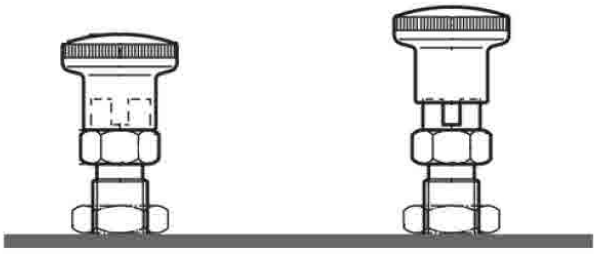

Closed Position Open Position

- Adjust the top row until the two bottom locking-pins (**A**) click into position. If they don't close automatically, gently push the locking-pins until it clicks into its fully closed position. Be sure locking-pins (**A**) are in their closed positions before moving on.
- Again, hold the top row with one hand and use the other to open each top locking-pin (**B**) one at a time until they click into place.
- Lastly plug in your power, turn on the switch, and make some music!

TIPTOPaudio®

Closing the Case

- First, unplug your power.
- While holding the top row with one hand, use the other to pull out the top locking-pins (**A**) one at a time.
- Lock the top row into place before moving onto the bottom row. Again check the locking-pins and make sure they are in their closed position.
- Now while holding the top row still with one hand, pull out the bottom locking-pins (**B**) one at a time and lock it into its Stationary Mode.

Station 252

TIPTOPaudio®